 



- 1, When parking and shifting to P gear, the above interface will be automatically displayed.
- $2 \$  The P block icon is displayed in the upper left corner of the screen
- 3 There are displays for opening the front, rear doors, trunk

and front hood.


4、When the door is not closed or the gear is still in P, the display will remain on the above interface for safety reasons.



- 6, ODO: 77987 km otal mileage
- 7  $\mathbb{D} = \mathbb{D} \xrightarrow{\mathbb{A}} \mathbb{E}$  light information

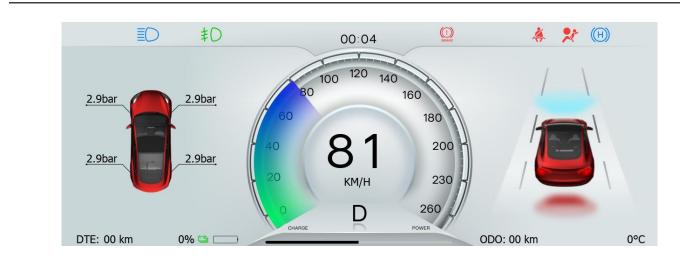


#### Enter D mode

 

data shows that when the car is started, the correct tire pressure data of the four wheels are displayed.

 - 2. Seat belt not fastened warning
  3. Calibration and a set of the set
- 8, Following distance reminder





1. Press the right scroll wheel to the right to enter the UI selection interface



#### 2. Three sets of UI selection interfaces

1. After entering the UI selection interface, scroll down with the right scroll wheel. Each time you scroll the UI, it will jump to the next UI.

2. After confirming the UI, click the right scroll wheel to the left to select the UI interface.

3. If you want to change again at this time, press the right scroll wheel to the right and enter the UI selection interface again.



#### UI interface 1 daytime mode



#### UI interface 1 night mode



#### UI interface 2 daytime mode



#### UI interface 2 night mode



#### UI interface 3 daytime mode



#### UI interface 3 night mode





1. When in Carplay, press the right scroll wheel to the right to enter the Carplay connection interface.

### **Carplay connection interface**

ţ	Connect to Bluetooth:	CarKit-9CCD	Pairing code: 0000	
		Connecting		

1、Turn on Bluetooth in the phone settings and find the corresponding Bluetooth name on the

machine, for example: CarKit-\*\*\*

2、Click the Bluetooth name of the machine on your phone to start pairin


## **Connecting to Carplay**

Ð				
	Connect to Bluetooth:	CarKit-9CCD	Pairing code: 00	000
		Please connect Bluetc	oth	
後期:Cranyany*(初日 Carring)を回る(日本) たいのうを回る(日本)の「いい」を用意 トランパーン 日本ののうまの(日本)の「いい」を用意 トランパーン 日本ののうまの(日本)の「いい」 日本ののうまの(日本)の「いい」 日本ののうまの(日本)の「日本)の 日本ののうまの(日本)の「日本)の 日本ののうまの(日本)の 日本のの 日本のの 日本のの 日本のの 日本のの 日本のの 日本の 日本				

1. When connecting, in the dialog box that

pops up on your phone, choose to use Carplay.

#### **Carplay connected successfully**

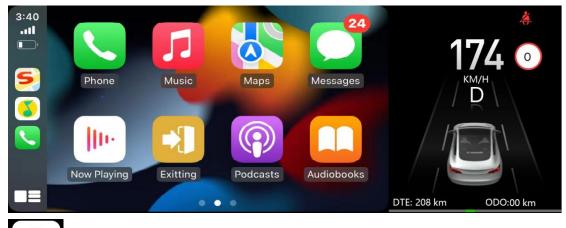

Android Auto connection and Carplay connection

#### methods are basically the same




Instrument settings, press the right scroll wheel to the right or long press to the left to enter the setting interface

syste	m settings											₹eturn
	lage settings	i <sup>a</sup> t	ime zone switch		TCO			hou	ır system		r US speed	
<	English	> <	C UTC+08:00	>	<	Celsius	>	<	24H	>	ON	
Tire p	oressure unit	Ca	ar model color		day	and night		briç	ghtness		Plaid swit	ch
<	Bar	> <	C White	>	<	night	>	<	100	>	ON	
WIFI			OTA upgrade								Front cam	iera
tsllin	k not con	necteo	d Update								OFF	
lan	guage settings											

1、 **Conglish** Language settings, English,

Simplified Chinese, Traditional Chinese, Japanese, Thai, Arabic.

2.  $\langle \text{UTC+08:00} \rangle$  Time zone settings

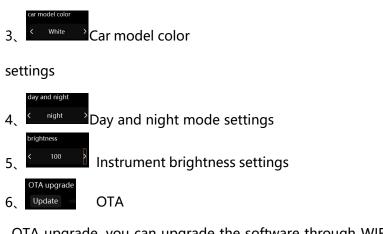

OTA upgrade, you can upgrade the software through WIFI network to update known issues. Press

and hold the right scroll wheel to the right, and the version information will appear.

#### Forward looking function



1, off Turn on or off the front camera function in the settings interface. If a front camera is

installed, turn it on. If not, turn it off.

2、When the car starts moving forward in D gear, it automatically switches to the front-view

camera when the speed is less than 20 kilometers per hour. Automatically exit the front view when the

vehicle speed is higher than 20

3. If the customer wants to keep the forward view function, they can long press the right scroll

wheel and press the right scroll wheel to the left when exiting.

#### **Ready to charge**



## During charging



## finished charging



## 6.86 Carplay

1 时速显示	2 档位显示	3 胎压数值显示 (四轮独立数值)				
🕢 电机马力值显示	5 能量条(释放)	🬀 续航里程数据				
🕜 总里程数据	电池电量百分比 (低于百份之之20警告红色)	🥑 车辆温度显示				
🔟 转向灯显示(双闪)	<u>0</u> 限速警告 (中欧/美图标)	12 定速巡航显示				
AP辅助驾驶显示	EAP/FSD辅助驾驶显示	5000000000000000000000000000000000000				
ೂ 驻车制动器显示	🔟 近光灯显示	133 远光灯显示				
19 示廓灯显示	20 前雾灯显示	21 后雾灯显示				
22 牵引力控制显示	23 制动系统警示	24 ABS系统警示				
25 胎压警告	26 未系安全带提醒	27 安全气囊警告				
23 车门状态显示 (6门)	29 充电动画	30 左右盲区 检测警示提醒				
31 车模灯光显示	32 跟车距离显示	33 AP/EAP/FSD 车道蓝色状态				
323 方向盘离手提示状态 (提示,警告,退出)	35 开机动画	36 Plaid百公里动画				
④天黑夜模式 (跟随原车/手动)	38 自动驻车	39 多国语言				
40 时区显示	温度单位     (摄氏度/华氏度)	42 胎压单位切换				
43 车模颜色切换	🥶 屏幕亮度调节 (手动/跟随	45 OTA升级				
3套UI ④ (黑夜/白天)	3 跟车,主车模 跟随颜色切换	48 前视盲区摄像显示				
充电车模充电桩     随车模颜色切换	3/Y车模 500 跟随原车切换	51 真3D建模 车内清晰可见				
52 按键强制重启	53 carplay	54 Android Auto				
注:车门未关	注:车门未关优先显示,关门后显示车速!					

# Press and hold the left scroll wheel

# to the left to force restart.